



 
DAEWOO

DWS-800

UHF 19" Quad Channel,
Modular Professional Wireless Receiver




9001:2015

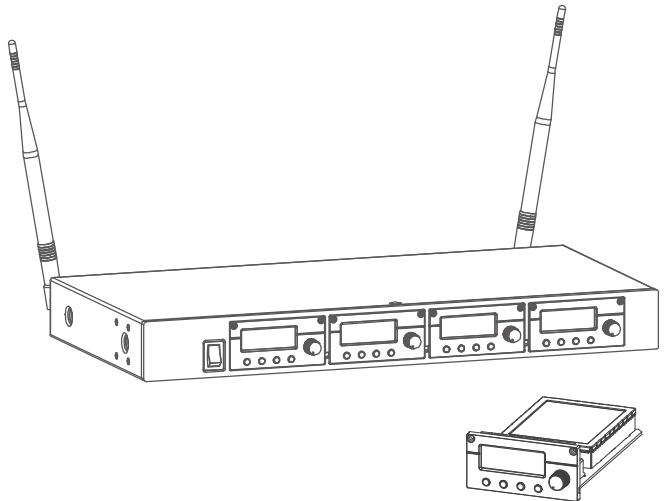


Thank you purchasing Quad channel modular professional wireless system.
This versatile modular cabinet can be used for four RECEIVER modules!

Before operation, please read this manual thoroughly to familiarize with the function of each part and the flexibility of this versatile cabinet.

 In the box




receiver cabinet

 


0~4 receiver modules



 
0~4 handheld / bodypack transmitters (optional)

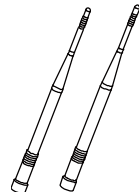

a pair of antennas

 

audio cable

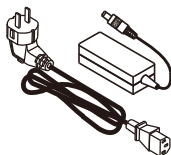 


switching adaptor




operation manual

**** Remark:** The above specifications are subject to change without prior notice.

  Parts and functions

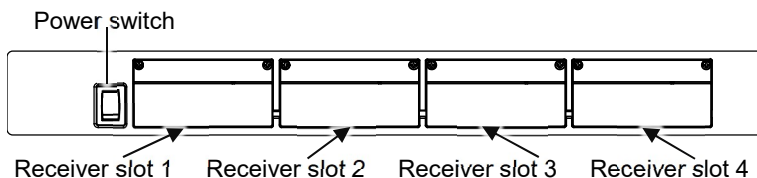

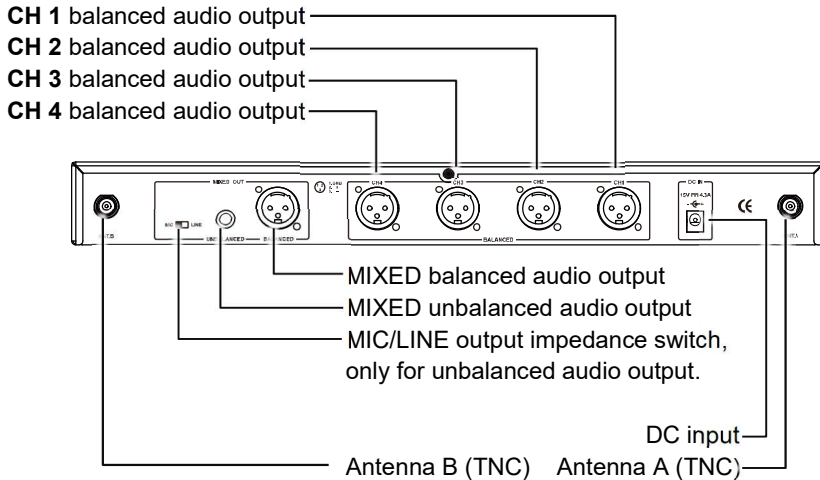


Audio output connection

There are two kinds of audio outputs on the back of the receiver:

1. Unbalanced output of channel 1~4 (mixed): High-impedance LINE level / Low-impedance MIC level. Switchable between MIC and LINE levels.

 
Use shielded audio cable for the connection between the receiver and the amplifier/mixer. If the amplifier/mixer has a 1/4"(6.3mm) phone jack, connect a cable from the 1/4"(6.3mm) unbalanced audio output from the receiver to the amplifier/mixer. If the amplifier/mixer has an XLR input, connect a cable from the balanced XLR audio output from the receiver to the amplifier/mixer input.

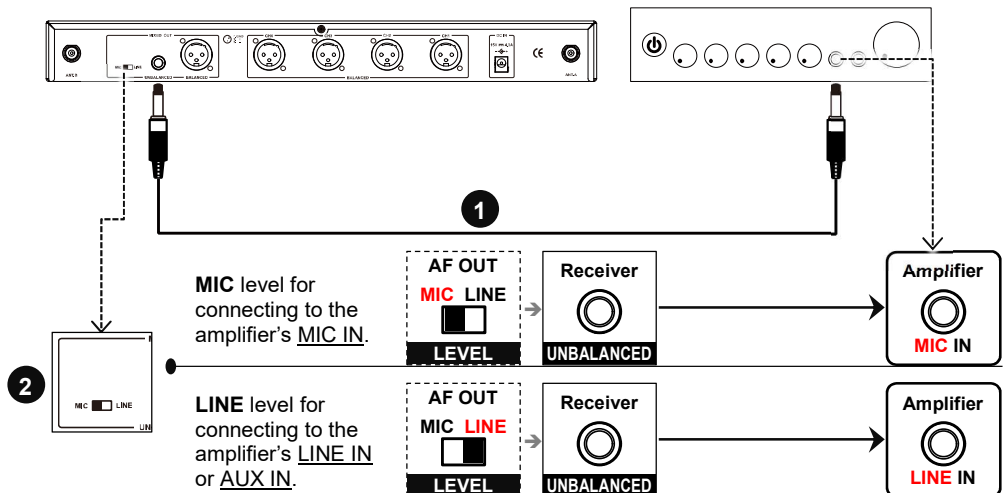

DWS-800, UHF 19" Quad Channel Receiver Module


2. **Balanced** output of channel 1~4: Low-impedance MIC level.

 XLR connector provides balanced audio output signal from this jack to the mixer/amplifier. Use an audio output cable with "XLR" or "Canon" connector, connect one end to the balanced output jack of the receiver, and the other end to the "MIC IN" jack of the mixer/ amplifier.

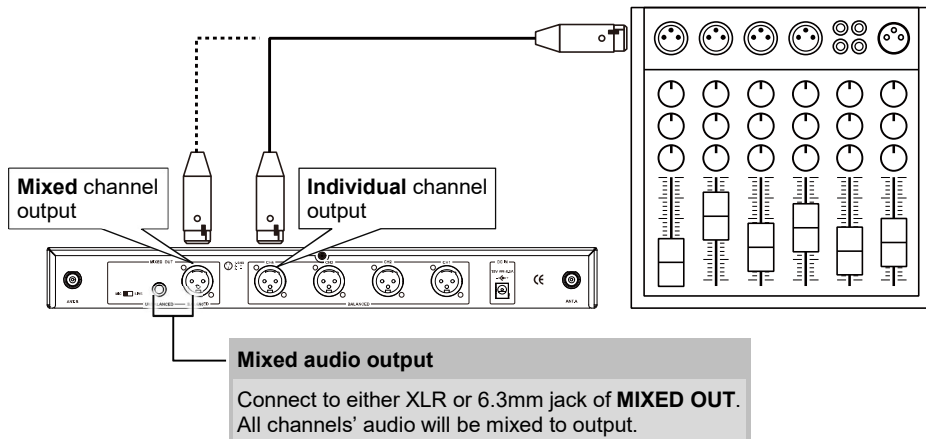


Rack mounting

 DWS-800 is an EIA standard 1U rack-mountable receiver base with metal chassis. It can be cabinet-mounted with provided kits. Please refer to the following assembly illustration.

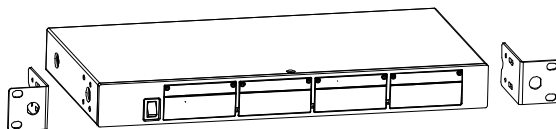

Receiver installation

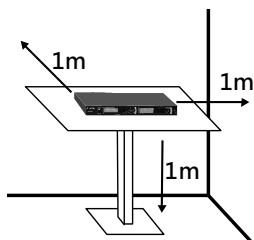 

For best operation, the receiver should be at least 1m above the ground and 1m away from a wall or metal surface to minimize reflections. The transmitter should also be at least 1m away from a wall or metal surface to minimize reflections. The transmitter should also be at least 1m away from the receiver. Keep antennas away from noise source such as motors, automobiles, neon light as well as large metal objects.



India Office: Unit 1203 A & B, 12th Floor, Tower A,
Signature Tower, Sector 30, Gurugram,
Haryana 122001 (INDIA)



715호, 스카이밸리, 416호 화곡로,
서울시강서구-07548, 대한민국.