




DAEWOO

DWS-821M


UHF Audio Repeater / Interlinking
Transmitter Module



9001:2015

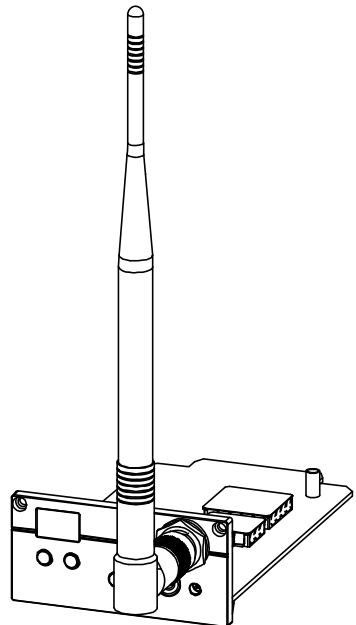

Parts and functions

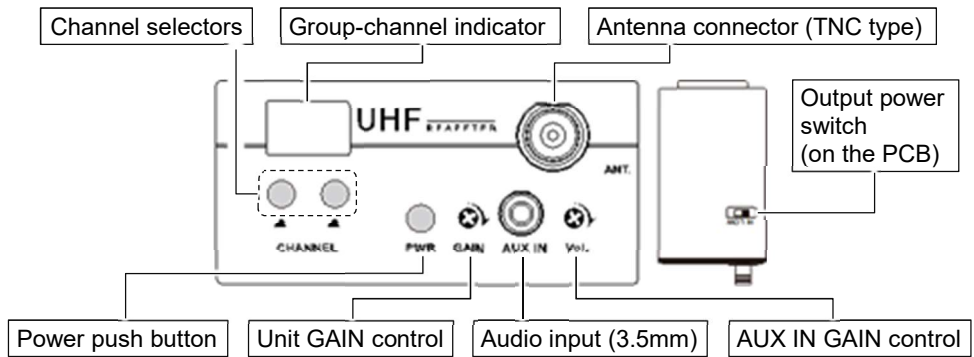



Changing group-channel

The system provides 10 default groups (1, 2, 3, ... 9, A) as recommended frequency settings for scenarios where multiple wireless microphones are used simultaneously.

- GROUP 1~5: Each group contains approximately 7 non-interfering channels.
- GROUP 6~A: Each group contains approximately 15 non-interfering channels.


Press LEFT ▲ button to increase the GROUP number.

Press RIGHT ▲ button to increase the CHANNEL number.

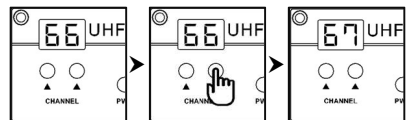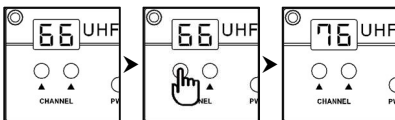


Audio input and gain control

1 Connect your Smart phone / tablet / MP3 player to the 3.5mm jack of AUX IN on the panel with a 3.5mm **3-pole stereo** audio cable.

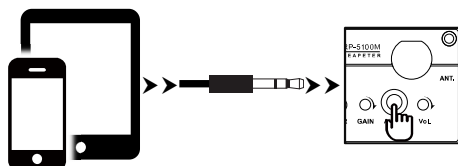


2 Use a mini screw driver to adjust the volume of the input audio.

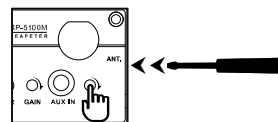


Adjust internal audio gain level

Use a mini screw driver to adjust the volume of audio sources in the master unit.

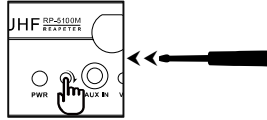

Output power setting

- **LOW** position for low output power and **HI** for high output power.
- Low output power will reduce the RF transmission distance and high output power will extend the possible RF transmission distance.
- If the module is installed on battery-powered amplifiers, remember HIGH output power places slightly more load on the battery and will reduce operating duration faster than LOW output power.

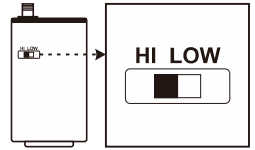

India Office: Unit 1203 A & B, 12th Floor, Tower A,
Signature Tower, Sector 30, Gurugram,
Haryana 122001 (INDIA)



715호, 스카이밸리, 416호 화곡로.
서울시강서구-07548, 대한민국.