



 
DAEWOO

DWS-822M


MP3 Recorder, USB/SD Player Module




9001:2015

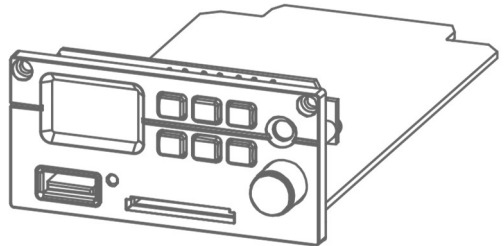

Parts and functions

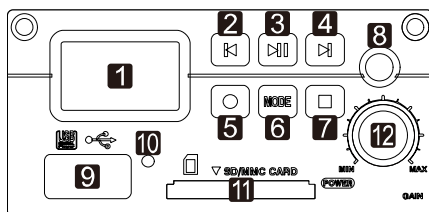 

remote control ➔

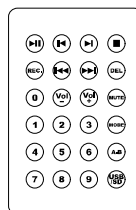 

1. LCD display
2. Press to return to previous track, press and hold to fast reverse.
3. Press to play/pause or stop recording.
(readable formats: **mp3**, **wav** and **wma**)
4. Press to go to next track, press and hold to fast forward.
5. Press to record.
6. Press to switch repeat modes.
7. Press to stop playing or recording.
8. IR sensor area
9. USB input
10. USB/SD indicator: The LED flashes green during playing and red during recording. It lights red if there is no track to play, lighting green when playing or recording stops.
11. SD card input
12. Power switch/volume control

Operating functions on the panel and the remote

Operating function	On the panel	On the remote
Play/pause	Press	Press
Record	Press to record and or to stop.	Press to record and or to stop.
Skip forward	Press	Press
Fast forward	Press and hold	Press and hold
Skip backward	Press	Press
Fast backward	Press and hold	Press and hold
Next folder	-	Press
Previous folder	-	Press
Track select (#0-9)	-	input track number, then press
USB/SD switch	-	Press
Repeat mode switch (ALL / SINGLE / FOLDER)	Press	Press
Volume control	-	Press or
A-B section play	-	Press to start, again to play section and again to stop
Delete tracks	-	Press to delete track and again to confirm your delete
Mute	-	press to mute/recover

Note:

- Supports FAT and FAT32 file systems only.
- Supports MP3, WAV and WMA music formats only
- Record track format :MP3; Bit rate: 128kbps; Sampling frequency: 44kHz
- Recordable only when USB/SD is detected.
- Record files will be stored in the RECORD folder of USB/SD.
- The files will be named as **FILE_001**, **FILE_002**, **FILE_003**...etc.
- The name of a deleted track won't be applied to its next one.
- Recordable until **FILE_999** appears with LCD displaying "**Num Full**".
- LCD displays **USB FULL** or "**SD FULL**" when insufficient memory left.
- LCD displays **SD LOCK** if the SD is locked.
- Don't remove the USB/SD during the recording process in case the interrupted track might be damaged.



India Office: Unit 1203 A & B, 12th Floor, Tower A,
Signature Tower, Sector 30, Gurugram,
Haryana 122001 (INDIA)



715호, 스카이밸리, 416호 화곡로.
서울시강서구-07548, 대한민국.